



MICROWAVE

1. Press the PROGRAM KEY «P» (1). The MICROWAVE indicator lights up on the DISPLAY (7). Confirm the function by pressing the PROGRAM KEY «P» (1) again.
2. Press the DURATION KEY (2). Enter the desired operating time by turning the ROTATING KNOB (8) in any direction. Confirm by pressing the DURATION KEY (2). again.
3. To change the power of the microwave, press the POWER/ WEIGHT KEY (3). (If this key is not pressed, the appliance functions at the maximum power.) Enter the desired power turning the ROTATING KNOB (8) in any direction. Confirm by pressing the POWER/ WEIGHT KEY (3) again.
4. Press the START KEY (4). The microwave starts to function.

QUICK START

1. In the Standby mode press START (4). The appliance starts immediately to function on the MICROWAVE function at the maximum power for 30 seconds.
2. If you would like to increase the functioning time press the START KEY (4) again. Each time the START key (4) is pressed the duration increases in 30 seconds. Function:

GRILL

1. Press the PROGRAM KEY «P» (1). Select the GRILL function by turning the ROTATING KNOB (8) in any direction. Confirm the function by pressing the PROGRAM KEY «P» (1) again.
2. Press the DURATION KEY (2). Enter the desired operating time by turning the ROTATING KNOB (8) in any direction. Confirm by pressing the DURATION KEY (2) again.
3. Press the START KEY (4). The microwave starts to function.

MICROWAVE + GRILL

1. Press the PROGRAM KEY «P» (1). Select the MICROWAVE + GRILL function by turning the ROTATING KNOB (8) in any direction. Confirm the function by pressing the PROGRAM KEY «P» (1) again.
2. Press the DURATION KEY (2). Enter the desired operating time by turning the ROTATING KNOB (8) in any direction. Confirm by pressing the DURATION KEY (2) again.
3. To change the power of the microwave, press the POWER/ WEIGHT KEY (3). (If this key is not pressed, the appliance functions at the maximum power.) Enter the desired power turning the ROTATING KNOB (8) in any direction. Confirm by pressing the POWER/ WEIGHT KEY (3) again.
4. Press the START KEY (4). The microwave starts to function. Defrosting by weight (automatic)

DEFROSTING BY WEIGHT AUTOMATIC

1. Press the PROGRAM KEY «P» (1). Select the DEFROSTING BY WEIGHT function by turning the ROTATING KNOB (8) in any direction. Confirm the function by pressing the PROGRAM KEY «P» (1) again.
2. Program « P01 » flashes (by default). Select the food type (program) by turning the ROTATING KNOB (8) in any direction (see table below). (If you do not turn the rotating knob « P01 » is selected by default.) Confirm by pressing the POWER/ WEIGHT KEY (3).
3. On the display you will see the weight (ex. « 0.1 » by default) and the weight indicator « kg » flashing. Indicate the weight of the food (ex. « 1,2 kg ») by turning the ROTATING KNOB (8) in any direction.) Confirm by pressing the POWER/ WEIGHT KEY (3). The program

you selected before (ex: « P01 ») starts to flash again.

4. Press the START KEY (4). The microwave starts to function.
5. Turn the foods around at the moment the microwave beeps and starts to flash on the DISPLAY (7): «TURN». Close the door again and press the START key (4).

The following table shows the programmes for the defrosting by weight function, indicating the weight ranges, defrosting and resting times (to ensure that the food reaches a uniform temperature):

Prog	Food	Weight (kg)	Time (Min)	Resting time (Min)
P01	Meat	0.1 – 2.5	3 – 75	20 – 30
P02	Poultry	0.1 – 2.5	3 – 75	20 – 30
P03	Fish	0.1 – 2.5	3:20 – 83	20 – 30
P04	Fruit	0.1 – 1.0	2:36 – 28	5 – 10
P05	Bread	0.1 – 1.5	2:25 – 36:15	5 – 10

DEFROSTING BY TIME MANUAL

1. Press the PROGRAM KEY «P» (1). Select the DEFROSTING BY TIME function by turning the ROTATING KNOB (8) in any direction. Confirm the function by pressing the PROGRAM KEY «P» (1) again.
2. Press the DURATION KEY (2). Enter the desired operating time by turning the ROTATING KNOB (8) in any direction. Confirm by pressing the DURATION KEY (2) again.
3. Press the START KEY (4). The microwave starts to function.
4. When the oven stops and starts to beep, move or turn the foods. To continue, close the door of the microwave and press the start key, to continue the defrosting process.