



AMPLIFIER CONTROLS AND FUNCTIONS

1. Information screen.
2. 12: In playback mode, allows you to start and pause playback.
In radio mode, press this button with a Long tap to automatically tune and store fm stations.
3. Amplifier volume controls.
4. {/}: In play mode, a short tap of these buttons allows you to select the previous/next song you are playing at that time. A long touch of these buttons allows you to recoil/fast-forward playback.
In radio mode, a short tap of these buttons selects the previous/next tuned station.
5. MicroSD: connection port for MicroSD memory cards.
6. USB: connecting port of USB storage devices.
7. Switch to turn the amplifier on/off.
8. M: press this button successively and you will be switching between the different playback modes (USB, MicroSD, auxiliary inputs 1 and 2, FM or bluetooth radio).
9. Infrared receiver for remote control.

BLUETOOTH RECEIVER

The bluetooth receiver that has built in the amplifier will allow you to play and control the playback of music coming from a mobile phone. To do this, you will need to pair your phone with the bluetooth receiver module.

Select the bluetooth mode on the amplifier. Then turn on bluetooth option on your phone and select the corresponding device from the list of bluetooth devices. At that point, your phone will then be paired with the amplifier's bluetooth receiver module.

You can make use of the different playback options (start, pause, select previous/next song, volume) through the front panel of the device or remote control.

REMOTE CONTROL

1. Q: Lights up/stays in standby mode the amplifier.
2. EQ: allows you to select from the different available equals.
3. {/}: In play mode, a short tap of these buttons allows you to select the previous/next song you are playing at that time. A long touch of these buttons allows you to recoil/fast-forward playback.
In radio mode, a short tap of these buttons selects the previous/next tuned station.
4. 12: In playback mode, allows you to start and pause playback.
In radio mode, press this button with a long tap to automatically tune and store fm stations.
5. Direct selection numeric buttons.
6. M: press this button successively and you will be switching between the different playback modes (USB, MicroSD, auxiliary inputs 1 and 2, FM or bluetooth radio).
7. MUTE: turns the audio output on/off.
8. Amplifier volume controls.
9. Allows you to select the playback mode between REPEAT ALL and REPEAT ONE.